

Switching pool filter modes

1. **Turn pump OFF** using power switch on back wall.
2. Push down the lever on top of the filter and turn clockwise to desired mode.
3. Once mode is selected, release lever and turn the pump back on using the wall switch

NOTE: Filter control image below is shown 'upside down' as installed

BACKWASH*

Cleans out particles caught in the sand filter itself, to be run when filter pressure is high (20 psi+). Watch wastewater pipe and turn off once the outflow is clear.
Perform a RINSE following a BACKWASH.



WASTE*

Used for vacuuming heavy particulate waste OUT of the pool such as after adding floc.

RINSE*

Use for approx. 45 seconds after a BACKWASH to re-settle the sand inside the filter

FILTER

Normal pool filtration and vacuum mode

** **BLUE** modes remove water from the pool thru the standing black hose pipe in the woods to left of pool house. Ensure that the water level in the pool does not go below skimmer intake when using these settings...or else you will run the pump dry!*